


ILAFLON Resist SP-800

- Good system, especially for sweet foods
- For example chocolate fondue pot, various waffle or sandwich maker
- For the EU area only with Swiss Shield technology
- PFAS- and PTFE-free technology

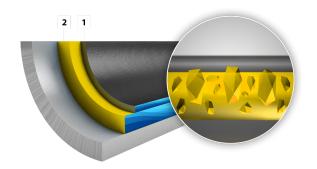

ILAFLON Resist SP-800 PFAS-free is a two-layer barrier-optimized anti-adhesion system with very good performance.

- 1. Durable, corrosion-resistant non-stick surface for good scratch resistance
- 2. Barrier-optimized base layer for good durability

Application

Application	
Bread maker container	Not suitable
Bred maker dough hook	Not suitable
Panini maker	Not suitable
Party grill / electrical grill	Not suitable
Baking and roasting oven tray	\checkmark \checkmark \checkmark
Pizza pan	Not suitable
Pancake (Crêpes) plate	\checkmark \checkmark \checkmark
Waffle maker	$\checkmark\checkmark\checkmark$
Belgium waffle maker	\checkmark
Pancake maker	$\checkmark \checkmark \checkmark$
Sandwich maker	\checkmark
Donut maker	\checkmark \checkmark \checkmark

Properties

Number of layers	2
Coating thickness	20 - 25 μm / 0.79 - 0.98 mils
Curing temperature to approx	280 °C / 536 °F
Service temperature	230 °C / 446 °F

Substrate

Substrate	Pre-treatment	Suitability
drawn aluminum	alkaline degrease	~ ~ ~
alu cast	alkaline degrease	\checkmark \checkmark \checkmark
aluminized steel	alkaline degrease	~ ~ ~
carbon steel	phosphating	\checkmark \checkmark \checkmark
stainless steel	alkaline degrease	~ ~ ~
drawn aluminum	alkaline degrease	~ ~ ~
alu cast	alkaline degrease	\checkmark \checkmark \checkmark
aluminized steel	alkaline degrease	~ ~ ~
carbon steel	phosphating	\checkmark \checkmark \checkmark
stainless steel	alkaline degrease	~ ~ ~ ~

ILAFLON Resist SP-800

	Deep fat fryer	Not suitable
	Air fryer	Not suitable
	Ralette pan (phosphated carbon steel)	~~
	Raclette pan (aluminized steel)	$\checkmark\checkmark\checkmark$
	Grill plate	\checkmark \checkmark \checkmark
	Microwave	\checkmark \checkmark \checkmark
	Baking and roasting oven	\checkmark \checkmark \checkmark
	Rice cooker	Not suitable
	Electrical wok	Not suitable
	Slow cooker / Skillet	Not suitable
	Milk frother	$\checkmark \checkmark \checkmark$
	Cheese fondue pot	Not suitable
	Meat fondue pot	Not suitable
	Chocolate fondue pot	$\checkmark\checkmark\checkmark$
	Iron soles	Not suitable
	Bread maker container	Not suitable
	Bred maker dough hook	Not suitable
	Panini maker	Not suitable
	Party grill / electrical grill	Not suitable
	Baking and roasting oven tray	\checkmark \checkmark \checkmark
	Pizza pan	Not suitable
	Pancake (Crêpes) plate	\checkmark \checkmark \checkmark
	Waffle maker	$\checkmark \checkmark \checkmark$
	Belgium waffle maker	$\checkmark \checkmark \checkmark$
	Pancake maker	$\checkmark\checkmark\checkmark$
	Sandwich maker	$\checkmark\checkmark\checkmark$
	Donut maker	$\checkmark\checkmark\checkmark$
	Deep fat fryer	Not suitable
	Air fryer	Not suitable
	Ralette pan (phosphated carbon steel)	~ ~ ~
	Raclette pan (aluminized steel)	$\checkmark\checkmark\checkmark$
	Grill plate	\checkmark \checkmark \checkmark
ILAFı	Microwave LON Kesist SP-800	√ √ √



Baking and roasting oven	\checkmark \checkmark \checkmark
Rice cooker	Not suitable
Electrical wok	Not suitable
Slow cooker / Skillet	Not suitable
Milk frother	$\checkmark\checkmark\checkmark$
Cheese fondue pot	Not suitable
Meat fondue pot	Not suitable
Chocolate fondue pot	\checkmark
Iron soles	Not suitable





Cleaning and care instructions

Before cleaning the appliance, disconnect the mains plug from the socket and allow it to cool down thoroughly. The appliance must not be immersed in water. To clean, use hot water and the fine side of a dishwashing sponge with a little washing-up liquid. A soft dishwashing brush can also be used for cleaning. Always wipe the appliance dry before storing it.

Stubborn food residues should never be cleaned with a metal sponge or the rough side of a dishwashing sponge. Instead, clean the product carefully and gently with warm soapy water and a soft sponge over a longer period of time.

Poorly cleaned items significantly reduce the non-stick effect and destroy the coating.

Non-stick coated, removable parts can be cleaned in the dishwasher, although this is not recommended due to the aggressive cleaning agents. Cleaning by hand is preferable.

Instructions for use

Remove packaging, labels and all stickers before first use. Clean products that can be removed from the electrical carrier part under hot water and with liquid detergent.

Before each use, check the power cable for defects. The appliance must never be used if it is defective. Removable, non-stick coated parts are intended exclusively for the electrical appliance and must never be used on the hob or in the oven.

The use of rubber, plastic or wooden utensils is recommended to avoid damaging the surface seal.

Longevity

All coatings are sensitive to scratches and cuts. Small scratches are visible, but do not impair the properties. Nevertheless, we do not recommend the use of metal cutlery and other sharp objects in cookware. Instead, the use of rubber, plastic or wooden utensils is recommended.

Temperature stability

Coatings for small electrical kitchen appliances are heat-stable from 230 °C (446 °F) to max. 250 °C (482 °F). However, it is expressly recommended that the manufacturer's maximum temperature is observed.

Overheating can lead to discolouration and a reduction in the non-stick effect.